



Ultra-Viol sp.j. Pietras, Purgał, Wójcik 34 Stępowizna Str., 95-100 Zgierz, Poland VAT PL 727 00 21 903 www.ultraviol.pl/en Contact: phone number +48 42 717 77 45 ext. 21 mobile +48 725 779 277 fax +48 42 715 02 16, e-mail: office@ultraviol.pl


TECHNICAL DATA SHEET **NBV series** 



### NBV 2x55 N DIRECT RADIATION UV-C GERMICIDAL LAMP

# HOW DOES THE DIRECT RADIATION UV-C GERMICIDAL LAMP WORK?

Direct radiation germicidal lamps type NBV are designed to prevent primary and secondary infections of patients and medical personnel caused by airborne pathogenic microorganisms (pathogens). Using direct germicidal radiation in the rooms where infected patients or patients with immune deficiencies are staying, significantly reduces the probability of infection spread by air. Raising the level of microbiological purity of the air and the rooms helps to destroy and reduce the impact of existing outbreaks of pathogens.

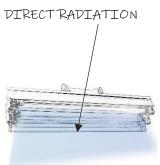

CLEAN AIR AND SURFACE

#### **BASIC DATA:**

Airflow disinfection function (flow disinfection chamber)	no
Direct radiation function	yes
Presence of people, animals, plants inside the room during the disinfection process	not allowed
Mounting type	wall-mounted
Working time counter	no
External bulbs	yes, 2 bulbs
Casing material	powder lacquered aluminum
Reflector material	High-quality reflective aluminum
Switch on/off	no
Ambient temperature	+10°C to +40°C
Relative humidity	30% to 70%
Atmospheric pressure	700 hPa to 1060 hPa
Declaration of conformity	yes
User's manual English version	yes





Ultra-Viol sp.j. Pietras, Purgał, Wójcik 34 Stępowizna Str., 95-100 Zgierz, Poland VAT PL 727 00 21 903 www.ultraviol.pl/en

Contact: phone number +48 42 717 77 45 ext. 21 mobile +48 725 779 277 fax +48 42 715 02 16, e-mail: office@ultraviol.pl

### **TECHNICAL DATA SHEET**

## **NBV** series

## **NBV 2x55 N**

### DIRECT RADIATION UV-C GERMICIDAL LAMP

### **TECHNICAL DATA:**

Supply voltage	230 V, 50 Hz
Power consumption	115 W
UV-C bulbs (Philips/Osram)	2 x 55 W (TUV/HNS)
UV-C radiation wavelength	253.7 nm
The useful lifetime of the UV-C bulbs	min. 9000 h
The radiation intensity of the external UV-C tube at a distance of $1\mathrm{m}$	3.6 W/m <sup>2</sup>
The effective area of the lamp	22-27 m <sup>2</sup>
Exposure angle adjustment range	160 °
Class of protection against electric shock	I
Ingress Protection Code	IP 20
Lamp body dimensions - without holder $(L \times W \times H)$	960 x 85 x 145 mm
Total lamp mass	3.5 kg
Holder length	12.0 cm
Power cord length	0.8 m

### **APPLICATION RECOMMENDATIONS:**

### Hospitals

- operation theatres
- intensive care units
- emergency rooms
- examination and treatment rooms
- reception units
- patient rooms, isolation rooms
- soiled/dirty utility rooms

Outpatient clinics Medical laboratories Chemist's Beauty salons Pharmaceutical industry Food industry Cosmetic industry



Ultra-Viol's realisation